



DEFIANT 2 ASA INSTALL

The following is a step by step guide to help you install your CP Defiant 2 asa.

Tools you will need:

5/32 " Hex key (allen wrench)

Dow 33 or 55 grease

STEP 1

Remove stock regulator.



STEP 2

Remove stock reg recepticle.




STEP 2_{continued}



STEP 3

Insert larger 018 o-ring into slot on top of asa.

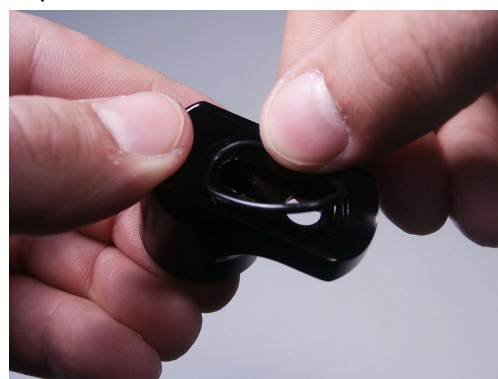


STEP 4

Install 010 o-ring onto 1/4-20 x 3/8 button head screw.



STEP 5

Grease around o-ring and tip of screw.

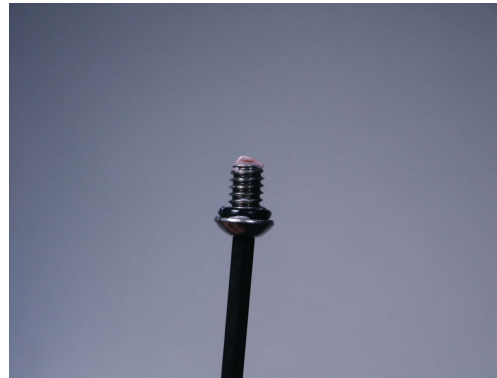

STEP 6

Grease around o-ring on top of asa.



STEP 7

Install asa on marker.



STEP 8

Make sure screw is very tight.



STEP 9

You have now successfully installed you CP ASA on your defiant 2.

