



The following is a step by step guide to help you install a CP Sling Blade or Rake trigger into a DM6, DM7, or an ULTRALITE Grip Frame.

Tools you will need

- 1/16 Hex key (Allen wrench)
- 5/64 Hex key (Allen wrench)
- 3/32 Hex key (Allen wrench)
- Needle nose Pliers
- Pick (Optional)

STEP 1

Using 3/32 hex Allen wrench remove all three screws on grip frame in order to remove the grip panel.



STEP 2

Fold back grip panel, remove battery and unplug wiring harness from circuit board.



STEP 3

With 5/64 hex Allen wrench remove three trigger screws from grip frame.




STEP 4

With 3/32 hex Allen wrench, remove both front and rear grip frame screws.



STEP 5

Remove stock trigger from grip frame.

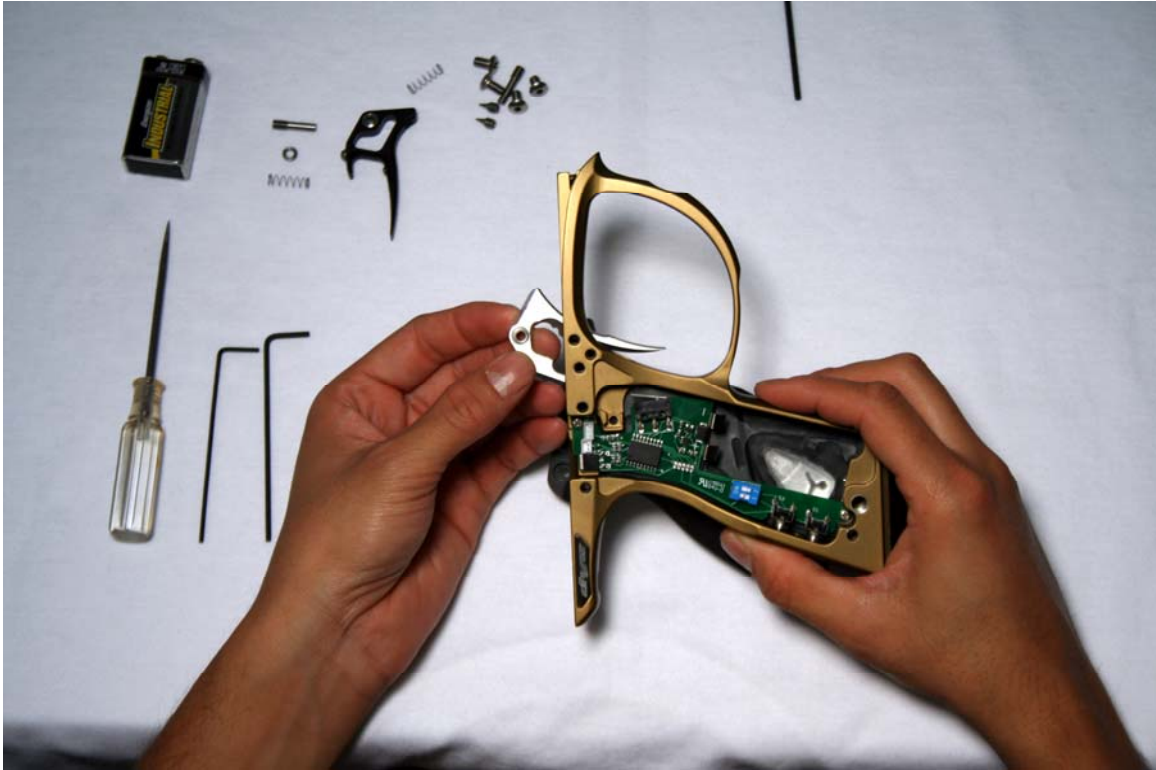


STEP 6

Place spacer in trigger with the beveled side (beveled side is the side with the small circle on the face) facing the bearing.





STEP 7

Place trigger with spacer in grip frame.

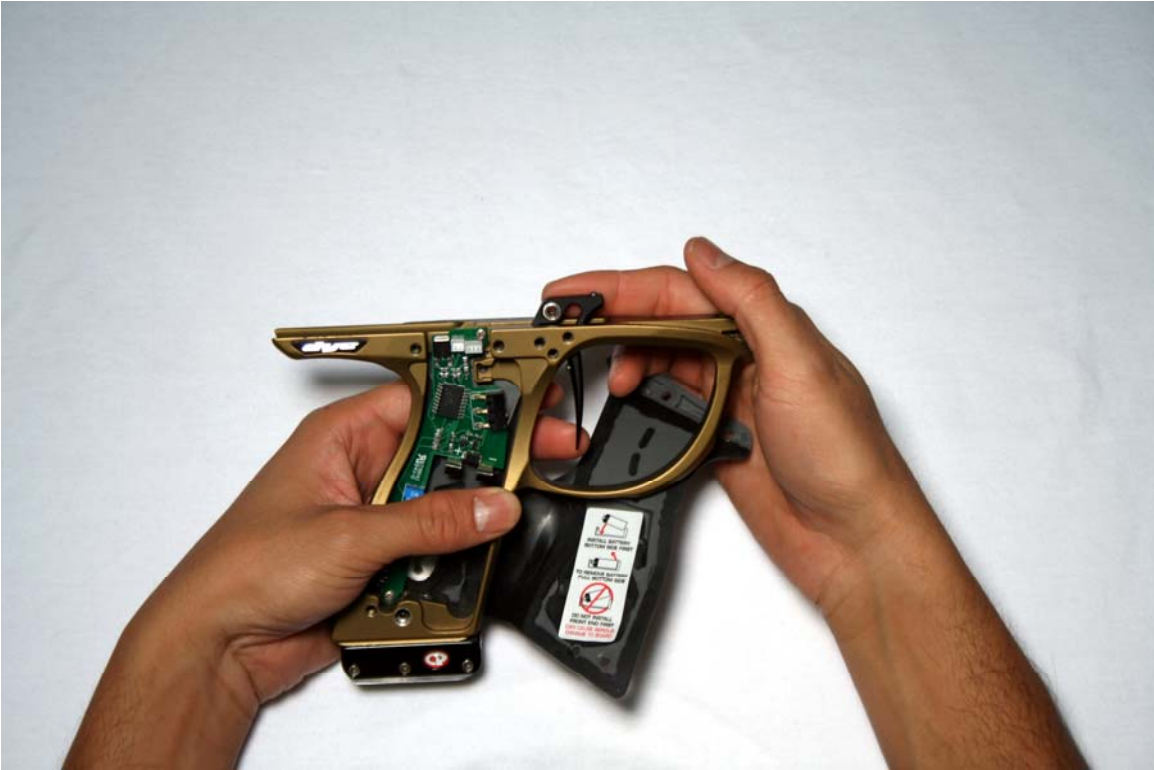

STEP 8

Using pin supplied with your new CP trigger insert into hole through grip frame and trigger.

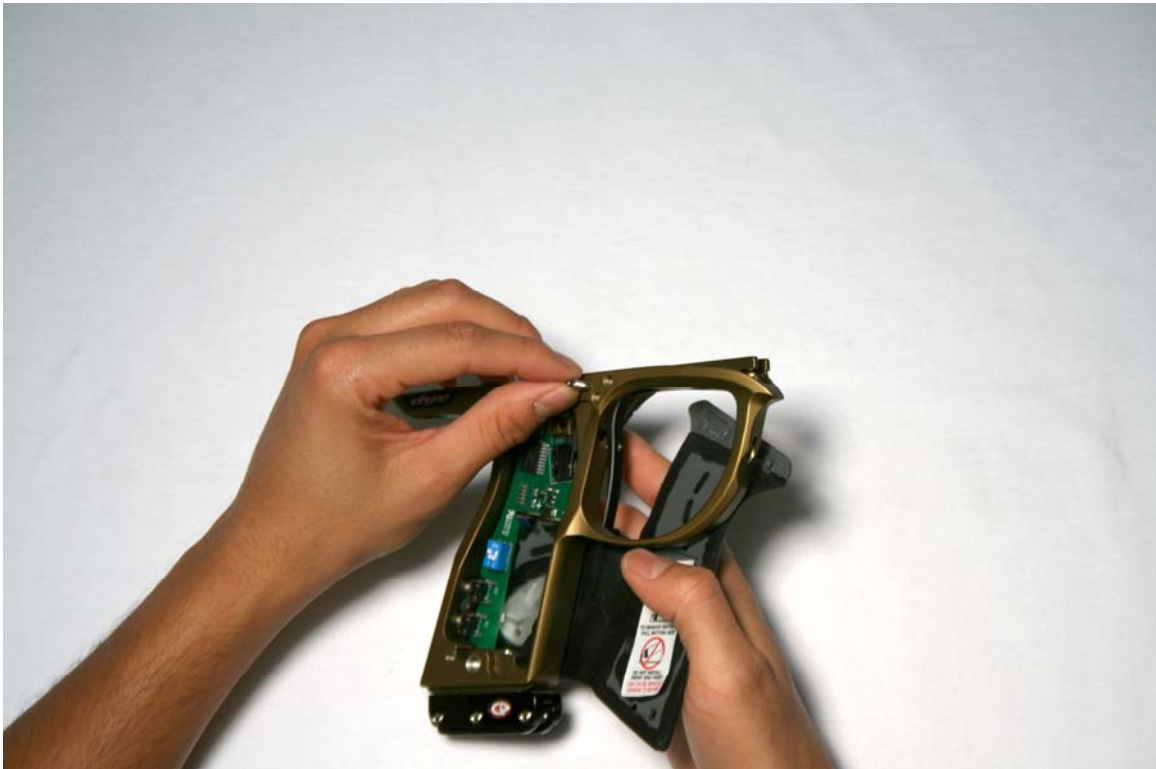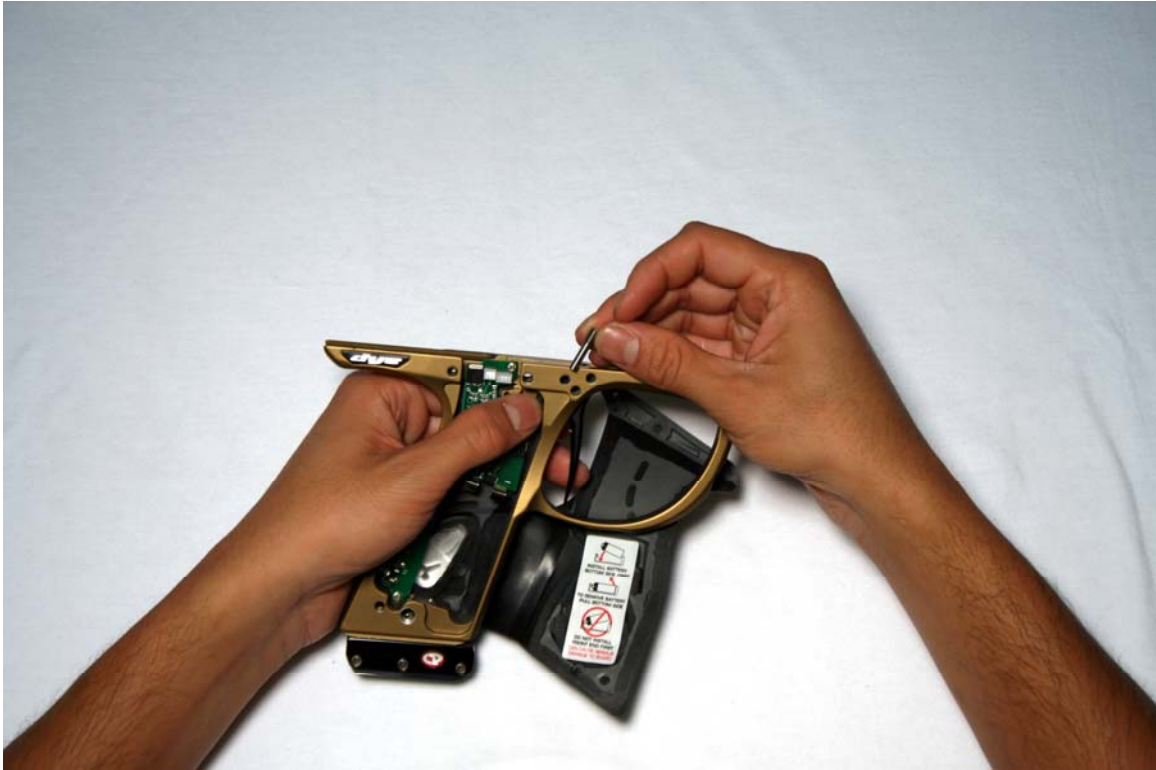

STEP 9

Install trigger spring between ball on the trigger, and grip frame.



STEP 10

Reassemble marker, using a 1/16 hex Allen wrench adjust lower set screw for trigger back travel.



STEP 11

Using a 1/16 hex Allen wrench adjust upper set screw for trigger forward travel.

